




SHAIBA

SHAIBA GU10 1X1	5215
SHAIBA GU10 2X1	5216
SHAIBA GU10 1X1 TRIMLESS	5228
SHAIBA GU10 2X1 TRIMLESS	5229

SHAIBA TRIMLESS FRAME 1X1	56011
SHAIBA TRIMLESS FRAME 2X1	56012



SHAIBA GU10

1. CUT-OUT THE REQUIRED MOUNTING APERTURE IN THE SUSPENDED CEILING.
2. MAKE THE ELECTRICAL CONNECTION.
3. FIX THE BODY TO THE CEILING.
4. INSTALL THE BULB.
5. PLACE BACK THE CYLINDER.

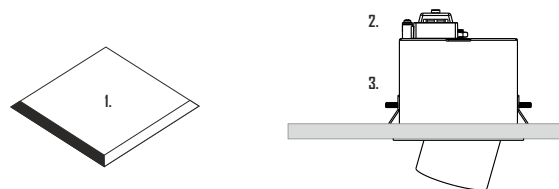

SHAIBA
CUT-OUT:

1X1	5215	98x98 mm
2X1	5216	98x196 mm

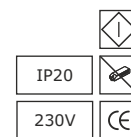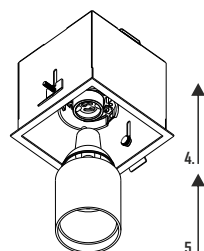



SHAIBA GU10 TRIMLESS TRIMLESS FRAME

1. CUT-OUT THE REQUIRED RECESSING APERTURE AND SCREW THE FRAME TO THE SUSPENDED CEILING.
2. LEVEL THE FRAME SO IT IS FLUSH WITH THE CEILING USING THE KNOBS ON THE FRAME, AND PLASTER THE GAP BETWEEN THE FRAME AND THE GYPSUM BOARD.
3. MAKE THE ELECTRICAL CONNECTION AND INSERT THE BODY INTO THE FRAME FIXING IT WITH THE KNOBS.
4. INSTALL THE BULB, AND PLACE BACK THE CYLINDER.



TRIMLESS FRAME
CUT-OUT:

1X1	56011	101x101 mm
2X1	56012	101x195 mm

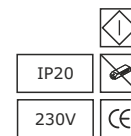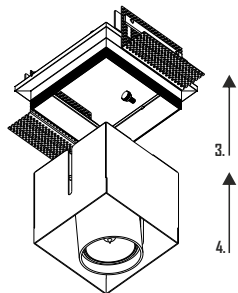

DEKKO

12-16 DRAGAN TSANKOV BLVD
1164 SOFIA,
BULGARIA

T +359 (0)2 8168116
F +359 (0)2 8168118

office@dekko.net
www.dekko.net