




CAST GU10
CAST
CAST SEMI
CAST SEMI Gu10

2004.XX
2005.XX
2006.XX
2007.XX


2004.XX

1. CUT OUT THE REQUIRED MOUNTING APERTURE IN THE SUSPENDED CEILING.
2. MAKE THE ELECTRICAL CONNECTION TO THE ECG .
3. FIX THE BODY TO THE CEILING.
4. INSTALL THE BULB.

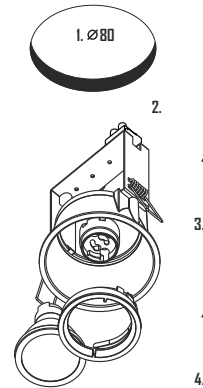


2005.XX

1. CUT OUT THE REQUIRED MOUNTING APERTURE IN THE SUSPENDED CEILING.
2. MAKE THE ELECTRICAL CONNECTION TO A LOW VOLTAGE TRANSFORMER .
3. FIX THE BODY TO THE CEILING.
4. INSTALL THE BULB.

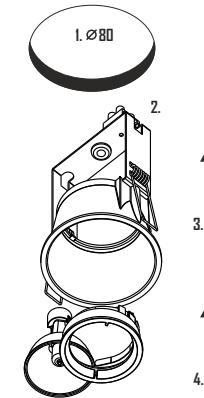


2007.XX

1. CUT OUT THE REQUIRED MOUNTING APERTURE IN THE SUSPENDED CEILING.
2. MAKE THE ELECTRICAL CONNECTION TO A LOW VOLTAGE TRANSFORMER .
3. FIX THE BODY TO THE CEILING.
4. INSTALL THE BULB.

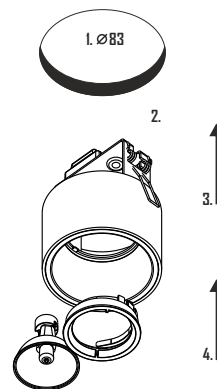

2008.XX

1. CUT OUT THE REQUIRED MOUNTING APERTURE IN THE SUSPENDED CEILING.
2. MAKE THE ELECTRICAL CONNECTION TO THE ECG .
3. FIX THE BODY TO THE CEILING.
4. INSTALL THE BULB.

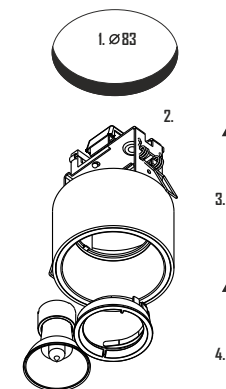

DEKKO

12-16 DRAGAN TSANKOV BLVD
1164 SOFIA,
BULGARIA

T +359 (0)2 8168116
F +359 (0)2 8168118

office@dekko.net
www.dekko.net