




OPTIC EXT

OPTIC EXT

3020

### OPTIC EXT

1. UNSCREW AND REMOVE THE BASE PLATE.
2. DRILL 2 HOLES AND FIX THE BASE TO THE CEILING.
3. MAKE THE ELECTRICAL CONNECTION TO THE TERMINAL BLOCK.
4. SCREW THE BODY TO THE BASE PLATE.
5. INSTALL THE BULB.
6. PLACE THE REFLECTOR.

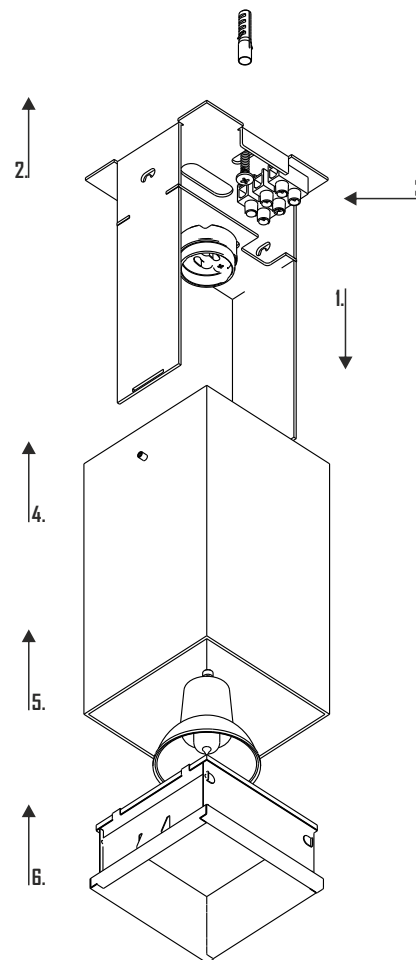

DEKKO

12-16 DRAGAN TSANKOV BLVD  
1164 SOFIA,  
BULGARIA

T +359 (0)2 8168116  
F +359 (0)2 8168118

office@dekko.net  
[www.dekko.net](http://www.dekko.net)

