




COMPONENTS

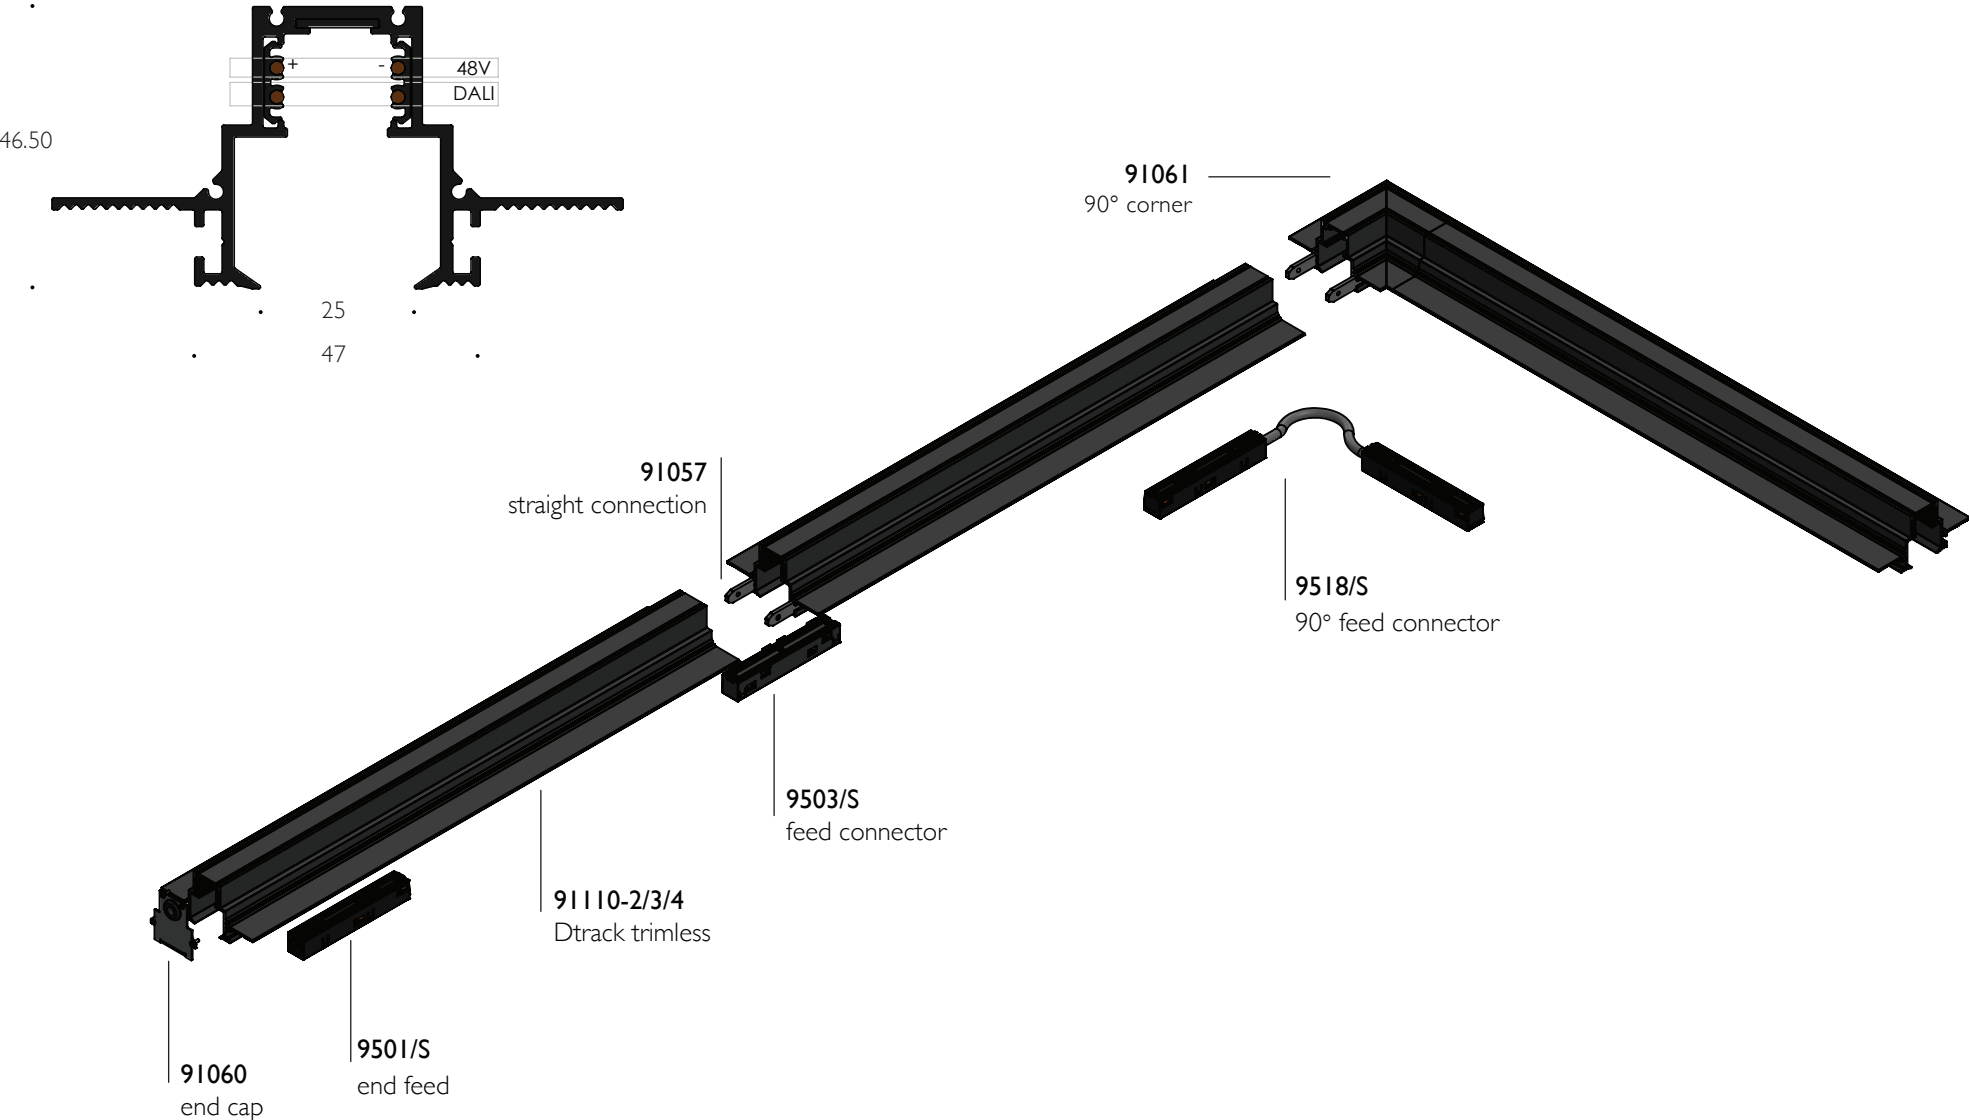


- 1** Cut a slot 50 mm of width and insert profile.

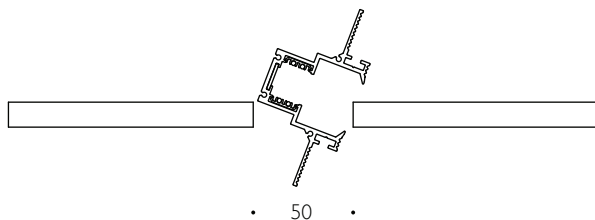





- 2** Fix profile to plasterboard with screws

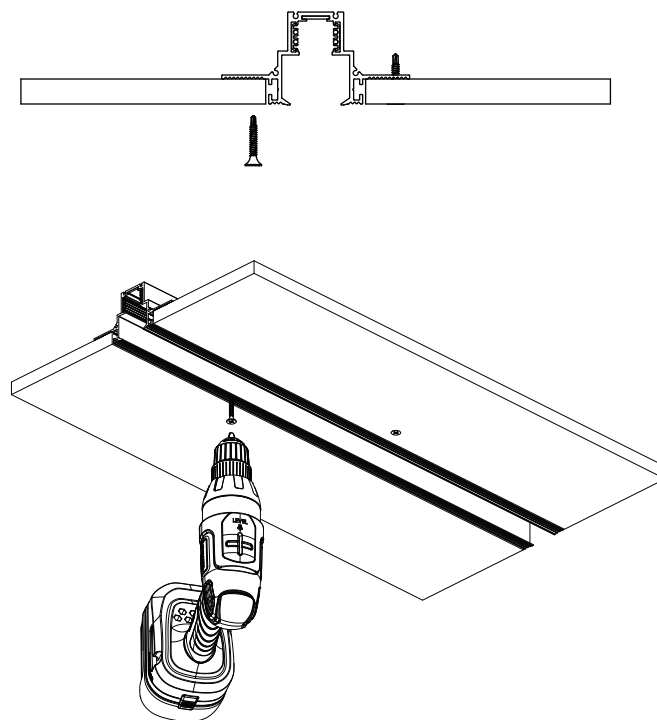

- 3** Plaster and paint

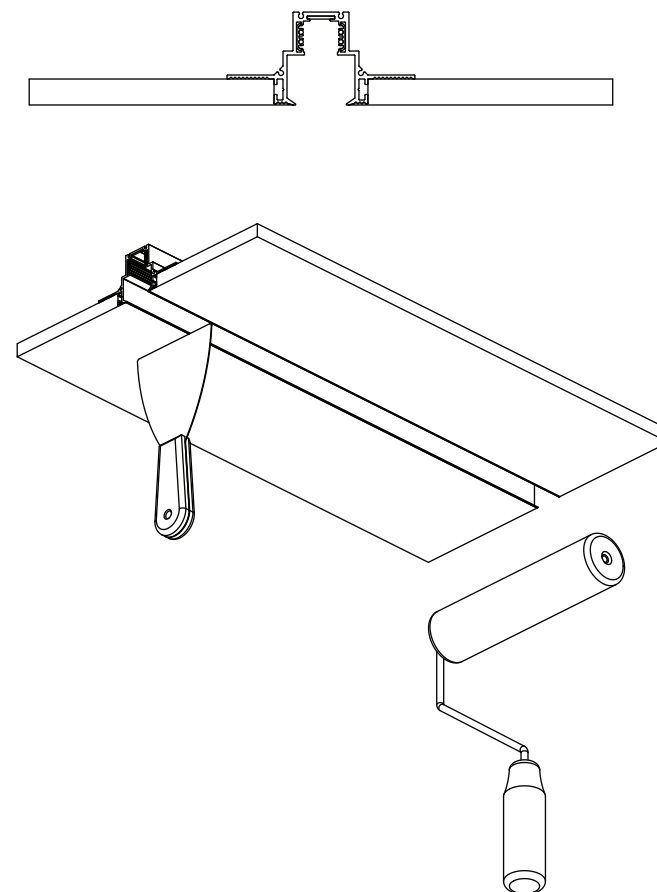

4 Make electrical connection to feed adapter

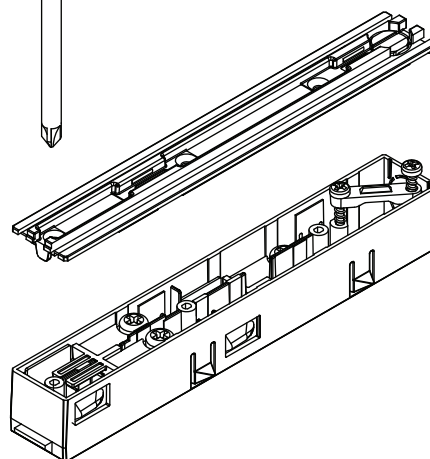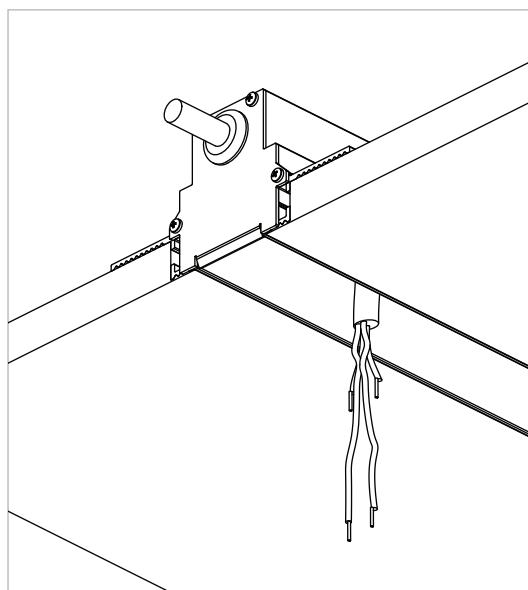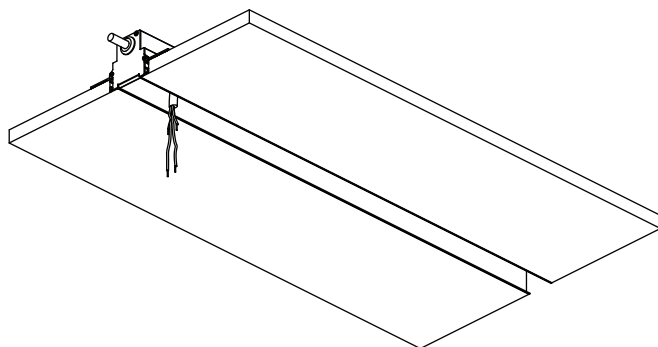

48V / DC - polarity insensitive

