



COMBI 90mm, 00052.xx


1 Cut hole in ceiling.

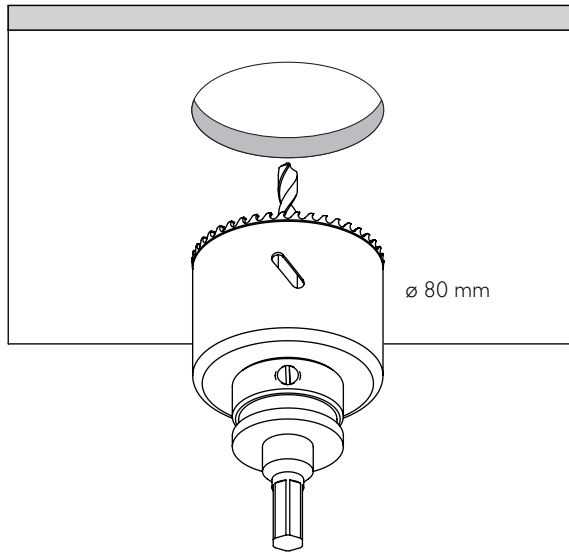


2 Disassemble suspension kit

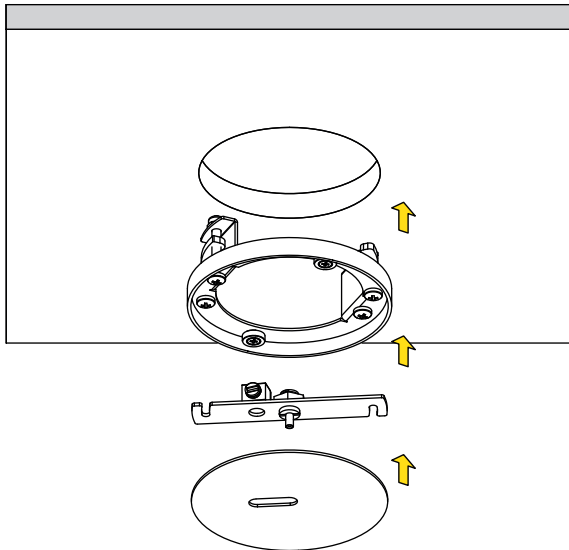


3 Fix to gipsum board.

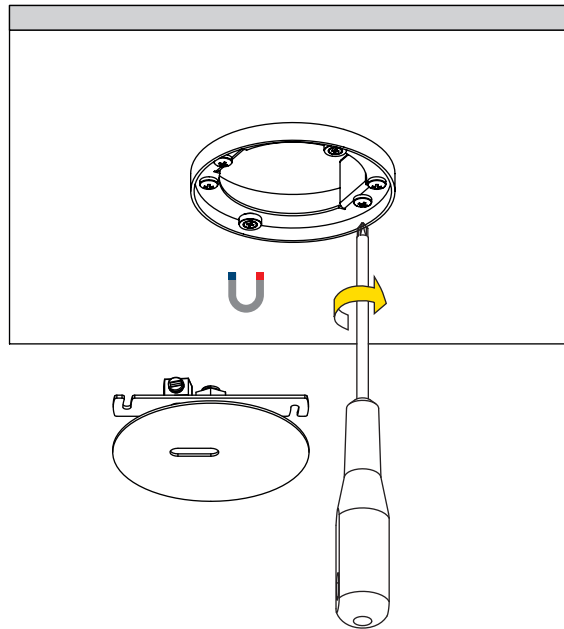

4 Connect luminaire to driver.

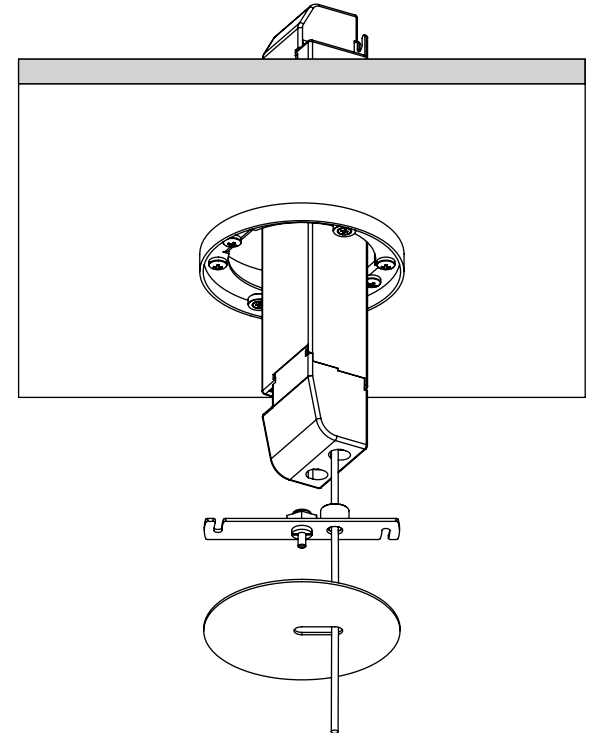


5 Reassemble.

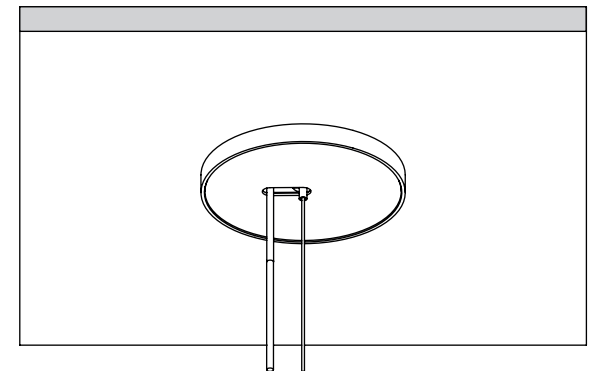


00050.xx


1 Cut hole in ceiling.

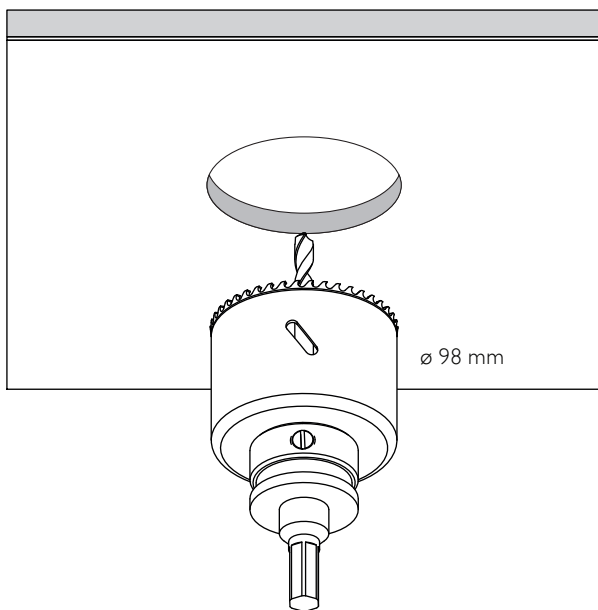


2 Plaster and paint.

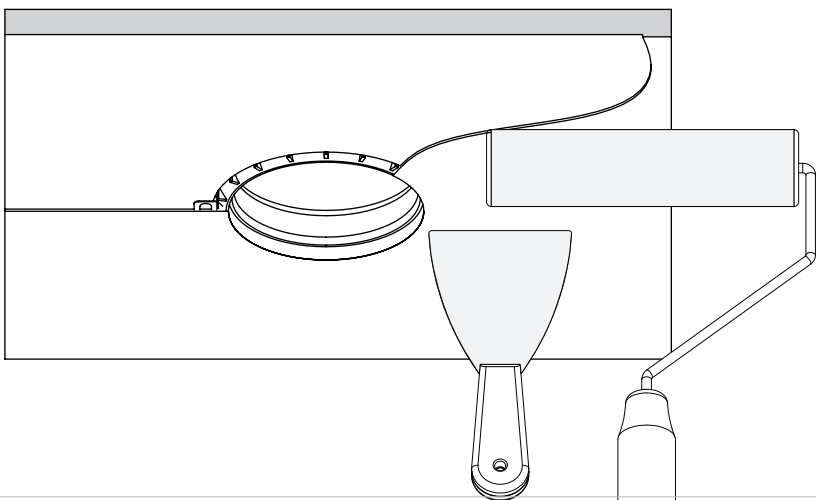


3 Connect luminaire to driver.

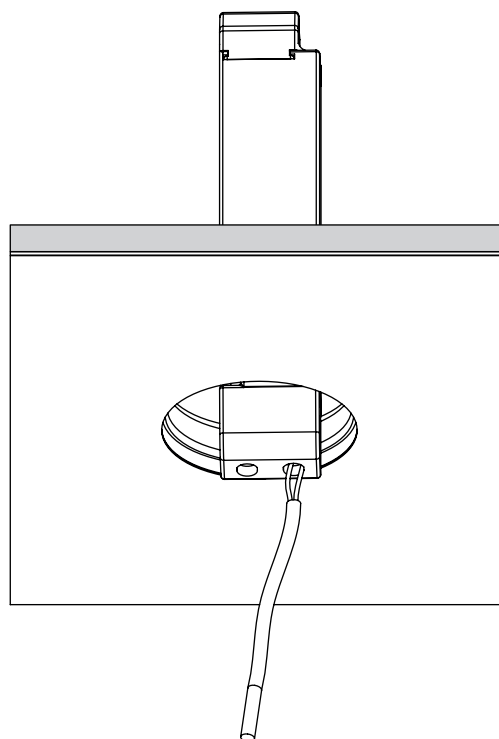

4 Insert plate into slots.

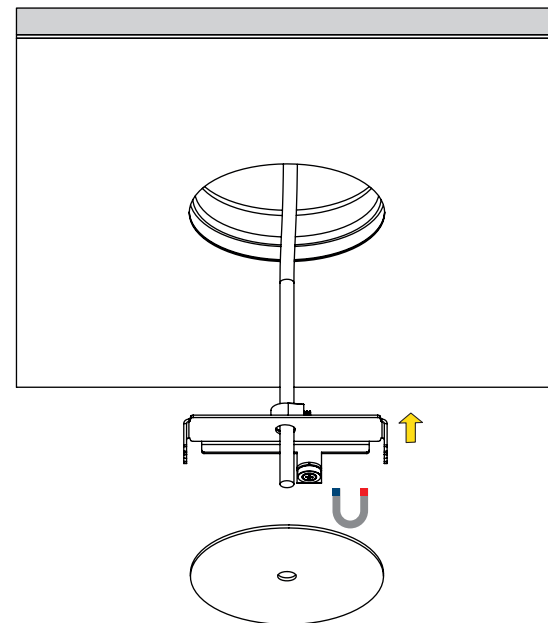


5 Reassemble.

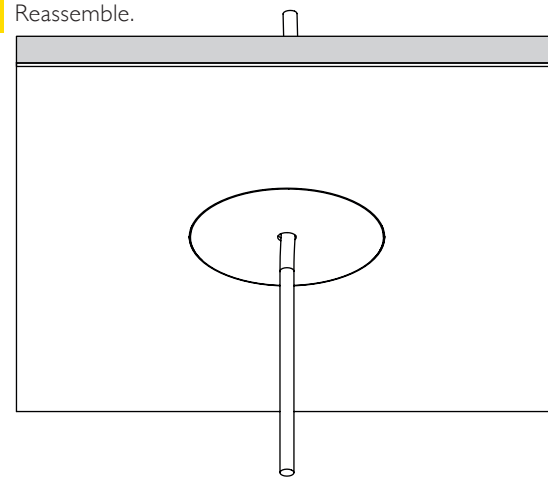


**Recessed 72 mm, 00051.xx**

- 1** Cut hole in ceiling.

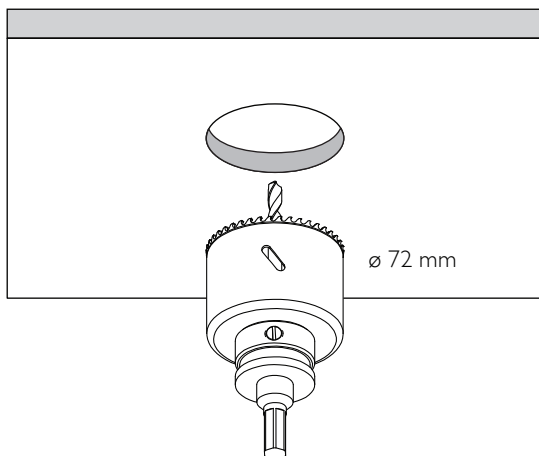


- 2** Connect luminaire to driver.


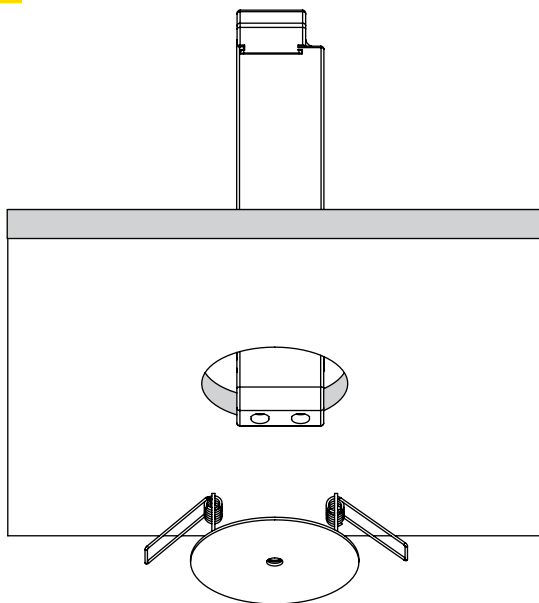


**Remote CV driver, 00013.xx**

- 1** Cut hole in ceiling.

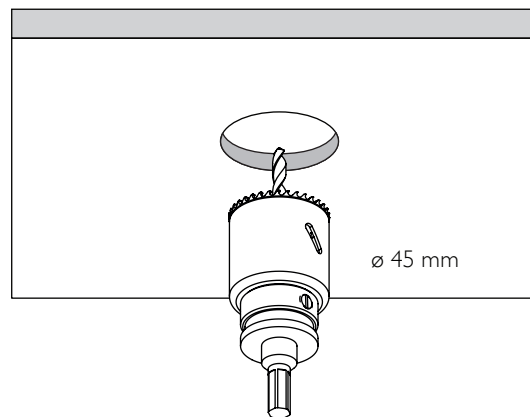


- 2** Connect luminaire to driver.

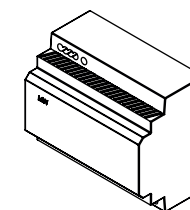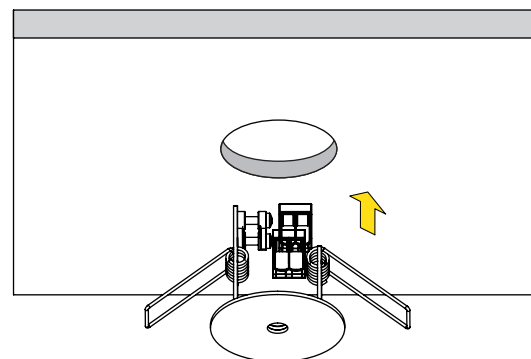


Remote CV driver, 000113.xx


1 Cut hole in ceiling.

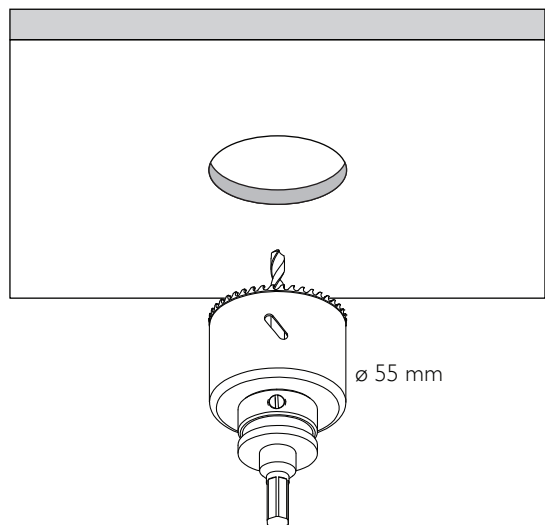


2 Insert plaster ring.

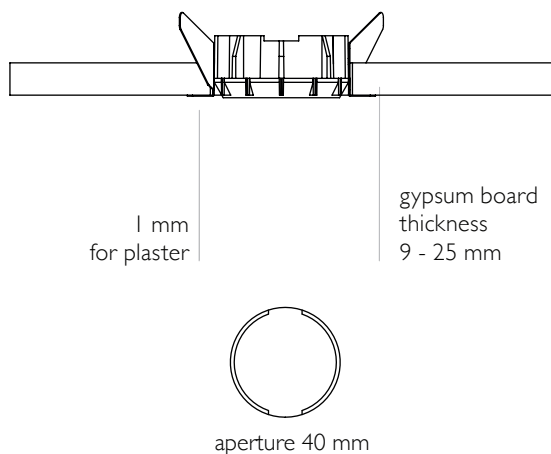

3 Plaster and paint.

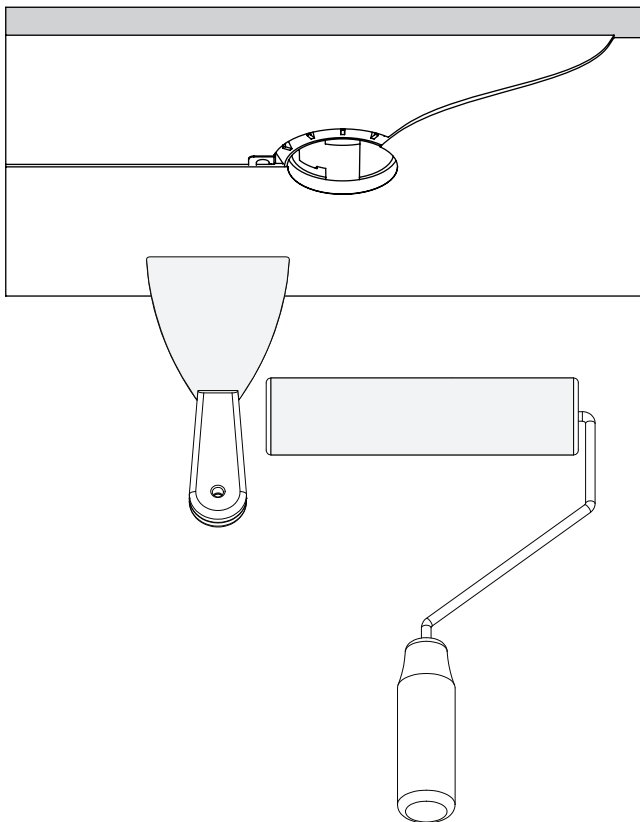

4 Connect luminaire to driver.

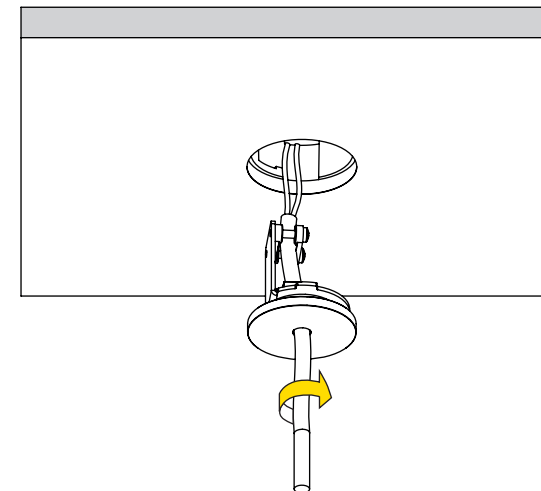

5 Reassemble.

