




- 1 Remove the fixers from the fitting.

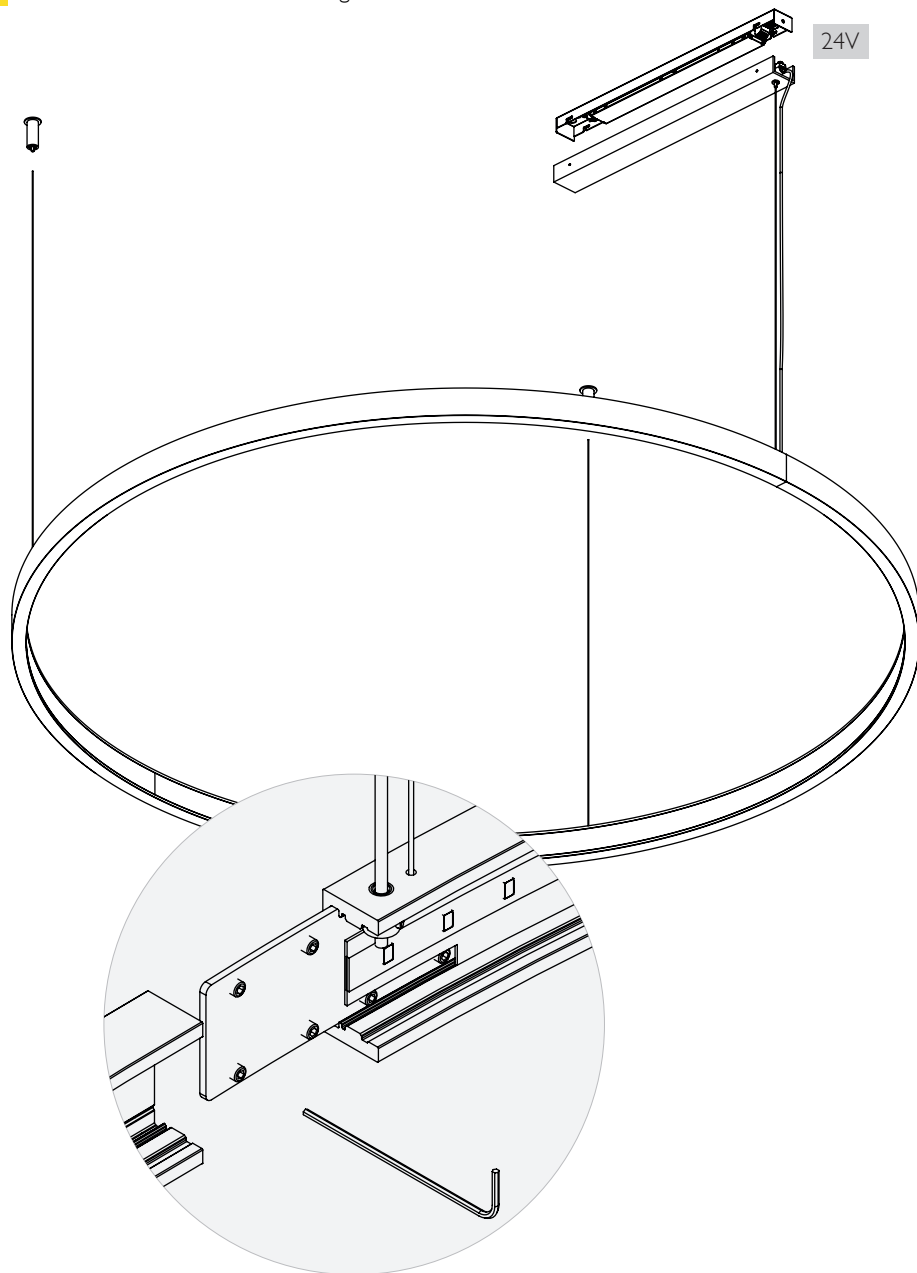


- 2 Tap on the ring and make dents in the ceiling using the sharp tips of the fixers. Mark and use as a template for the dowels.

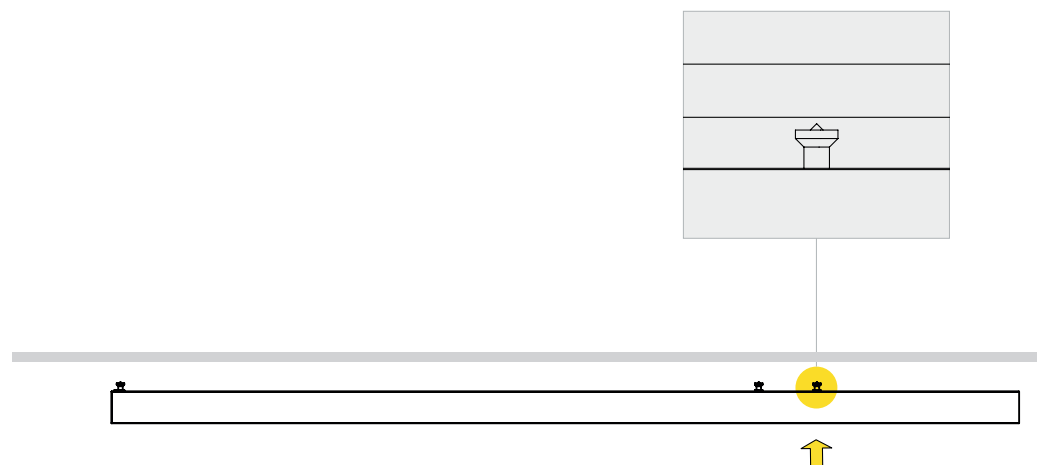

- 3 Fix baseplate with dowels.

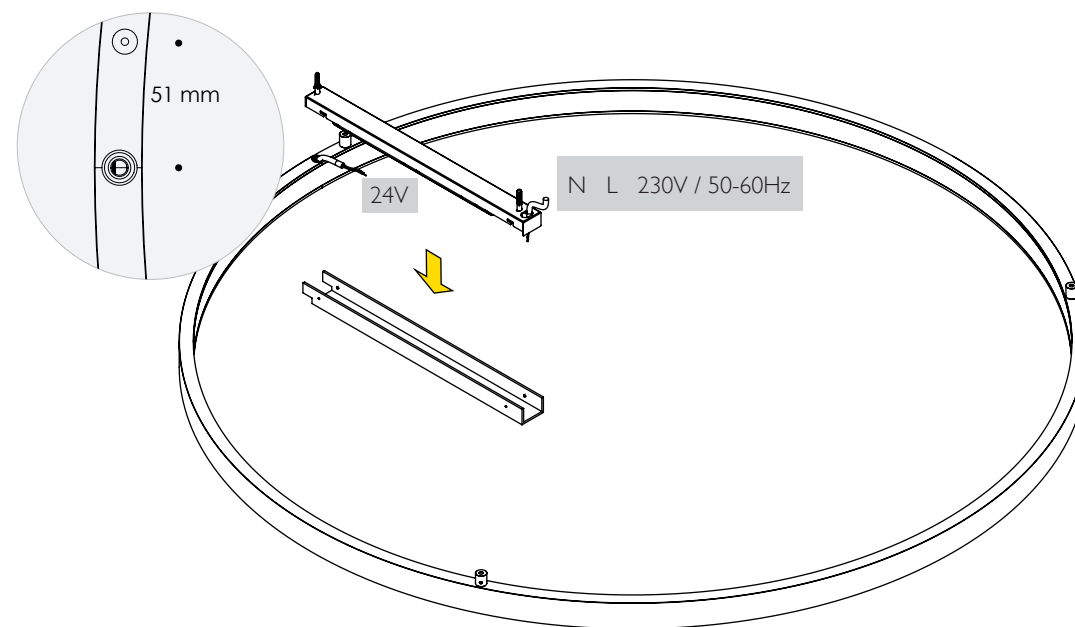

- 1** Slide and pull out cover.

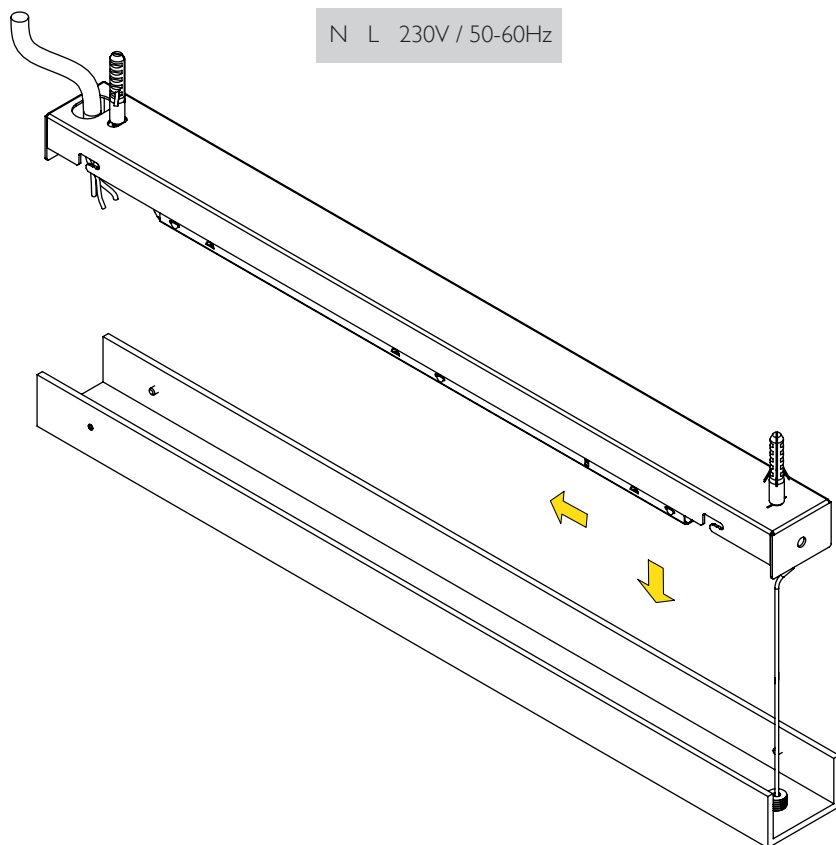


- 2** Drill holes for plugs and mount base plate.

## Distance between powerfeed cable and suspension


35W - 42171.xx




60W - 42172.xx



100W - 42173.xx




200W - 42174.xx



- 3** Connect to 220V.

- 4** Cut excess of wire rope after levelling.

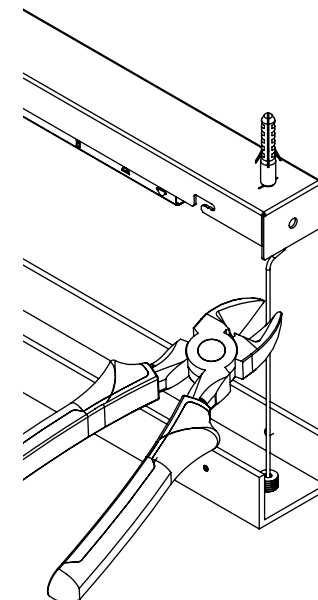

With resseded powerfeed.

